


# Spectra 1200FF

## Instructions

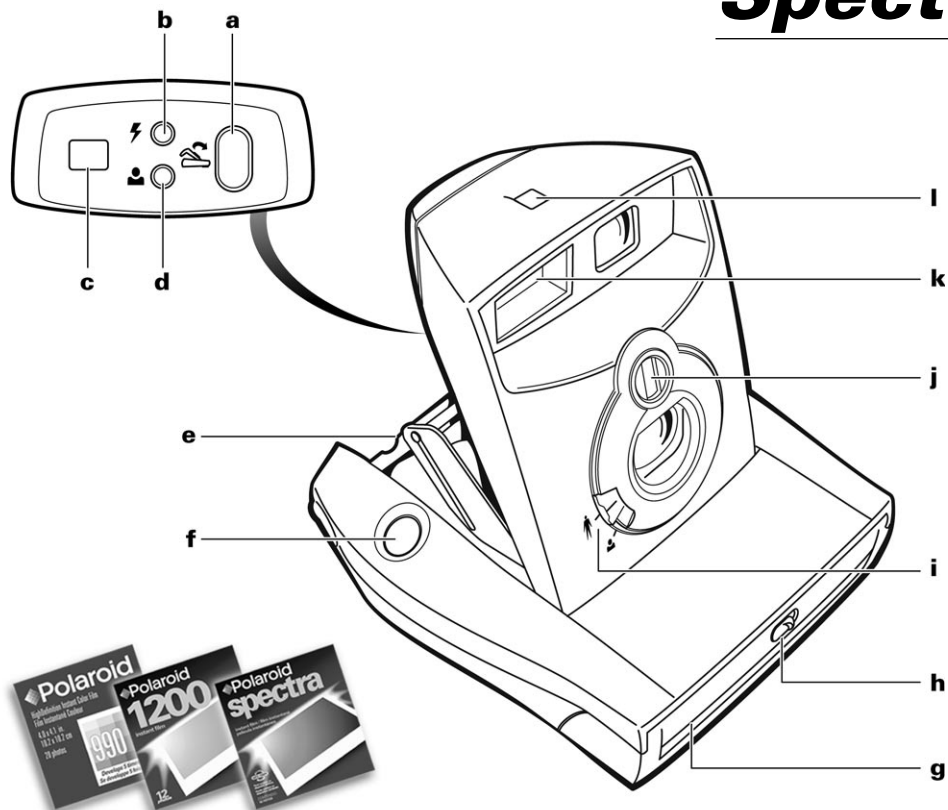


- a Camera open button
- b Green flash ready light
- c Viewfinder
- d Red close-up light
- e Folding panel
- f Shutter button
- g Film door
- h Film door latch
- i Normal and close-up switch
- j Photocell
- k Flash
- l Film counter (counts down)


### Open Camera




1 To open press button (a).

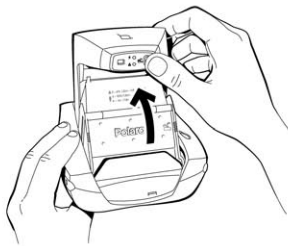

2 Lift until fully open

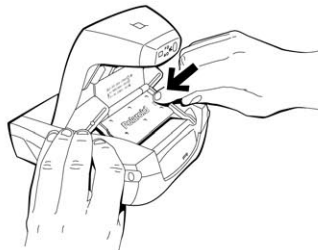

3 To close press on folding panel (e).

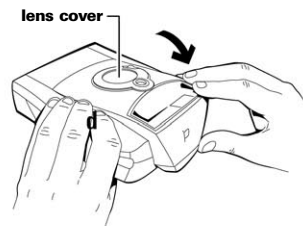


4 Lens cover automatically closes.

### Load Film (Important: Always load film pack with camera open!)




1 Open camera. Slide film door latch (h) to open.

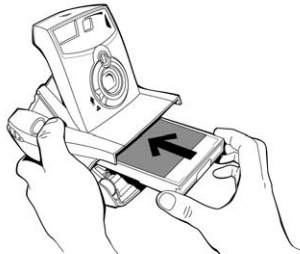

2 Insert film pack.



3 Close door.

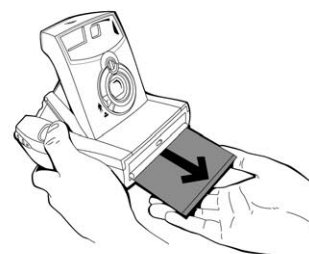

4 Film cover ejects automatically.



Remove empty film pack by pulling tab.

### Important


Always unload film pack with camera open!



0287-2-1-0


5/7/01

## Take Picture

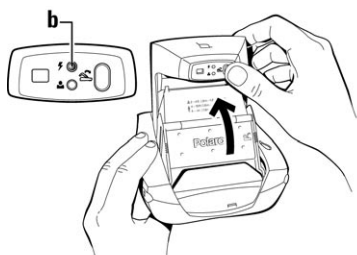


1 Open camera. Green light (b) glows.


**Note:** If green light (b) is off, lightly touch the shutter button.

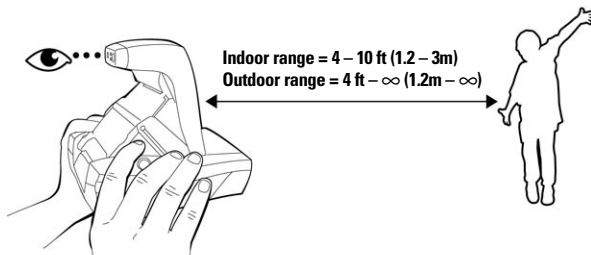


2 Aim.

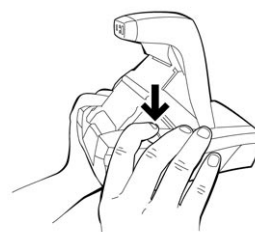


3 Press shutter button (f).

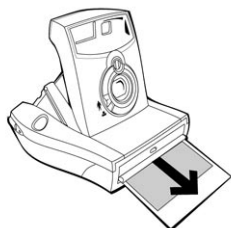

4 Picture ejects automatically.

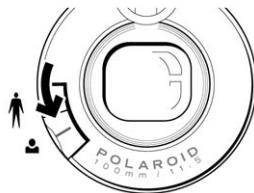

For close-up picture move switch to (👤). Stand between 2 - 4ft. (.6 - 1.2m). The red close-up light (d) turns on.

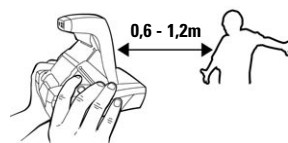

Return switch to normal position (👤) after close-up picture is taken.

## Troubleshooting

Blurry Picture	Cause	Solution
	Too close	If less than 4 ft (1.2m), use closeup lens. If less than 2 ft (.6m), move back to 2 ft (.6m), use closeup lens.
	Camera moves	Hold camera steady.
	Subject moves	Make sure subject is not moving in low light levels.

Dark Pictures	Cause	Solution
	Beyond flash range	Stand between 4 - 10 ft. (1.2 - 3m) for flash pictures.

Spots on Pictures	Cause	Solution
	Dirty rollers	Open camera. Openfilm door and clean rollers with damp cloth.

## One-year limited warranty

If this camera proves defective within one year of the original purchase date, Polaroid will, at our option, repair or replace any camera found defective in manufacture within the warranty period. The warranty period is determined by the date of camera purchase. Keep the receipt as proof of purchase. Otherwise, the warranty period is determined by the date of manufacture. To take advantage of the warranty, the camera must be returned to, and repaired by, one of the Polaroid Service Centers. **This warranty does not apply to damage caused by accident, misuse or tampering, and excludes all consequential damages except in jurisdictions not allowing such exclusions or limitations.**

## Film Precautions

This camera is powered by batteries contained within the film pack. Supervise children when camera is operated by them or used in their presence. To avoid electrical shock, do not expose to or immerse in water or other fluids, disassemble, or operate if dropped or damaged. Contact Polaroid Customer Support for repair information.

This film uses a caustic paste. Avoid contacting skin, eyes, or mouth with the paste. If you get some paste on your skin, eyes, or mouth, wipe it off immediately, wash with water to avoid an alkali burn and consult a doctor. Do not cut or take apart photos or battery. Do not burn battery or allow metal to touch its terminals. Keep discarded materials, or paste away from children, animals, clothing, and furniture.

## Polaroid service centers and offices

If you have questions about camera operation or repair, please contact your dealer or the nearest Polaroid office.

**1-800-343-5000**

[www.polaroid.com](http://www.polaroid.com)